


## 1. Power ON

Turn on JUE-501/JUE-251 by pushing power switch of Main unit.

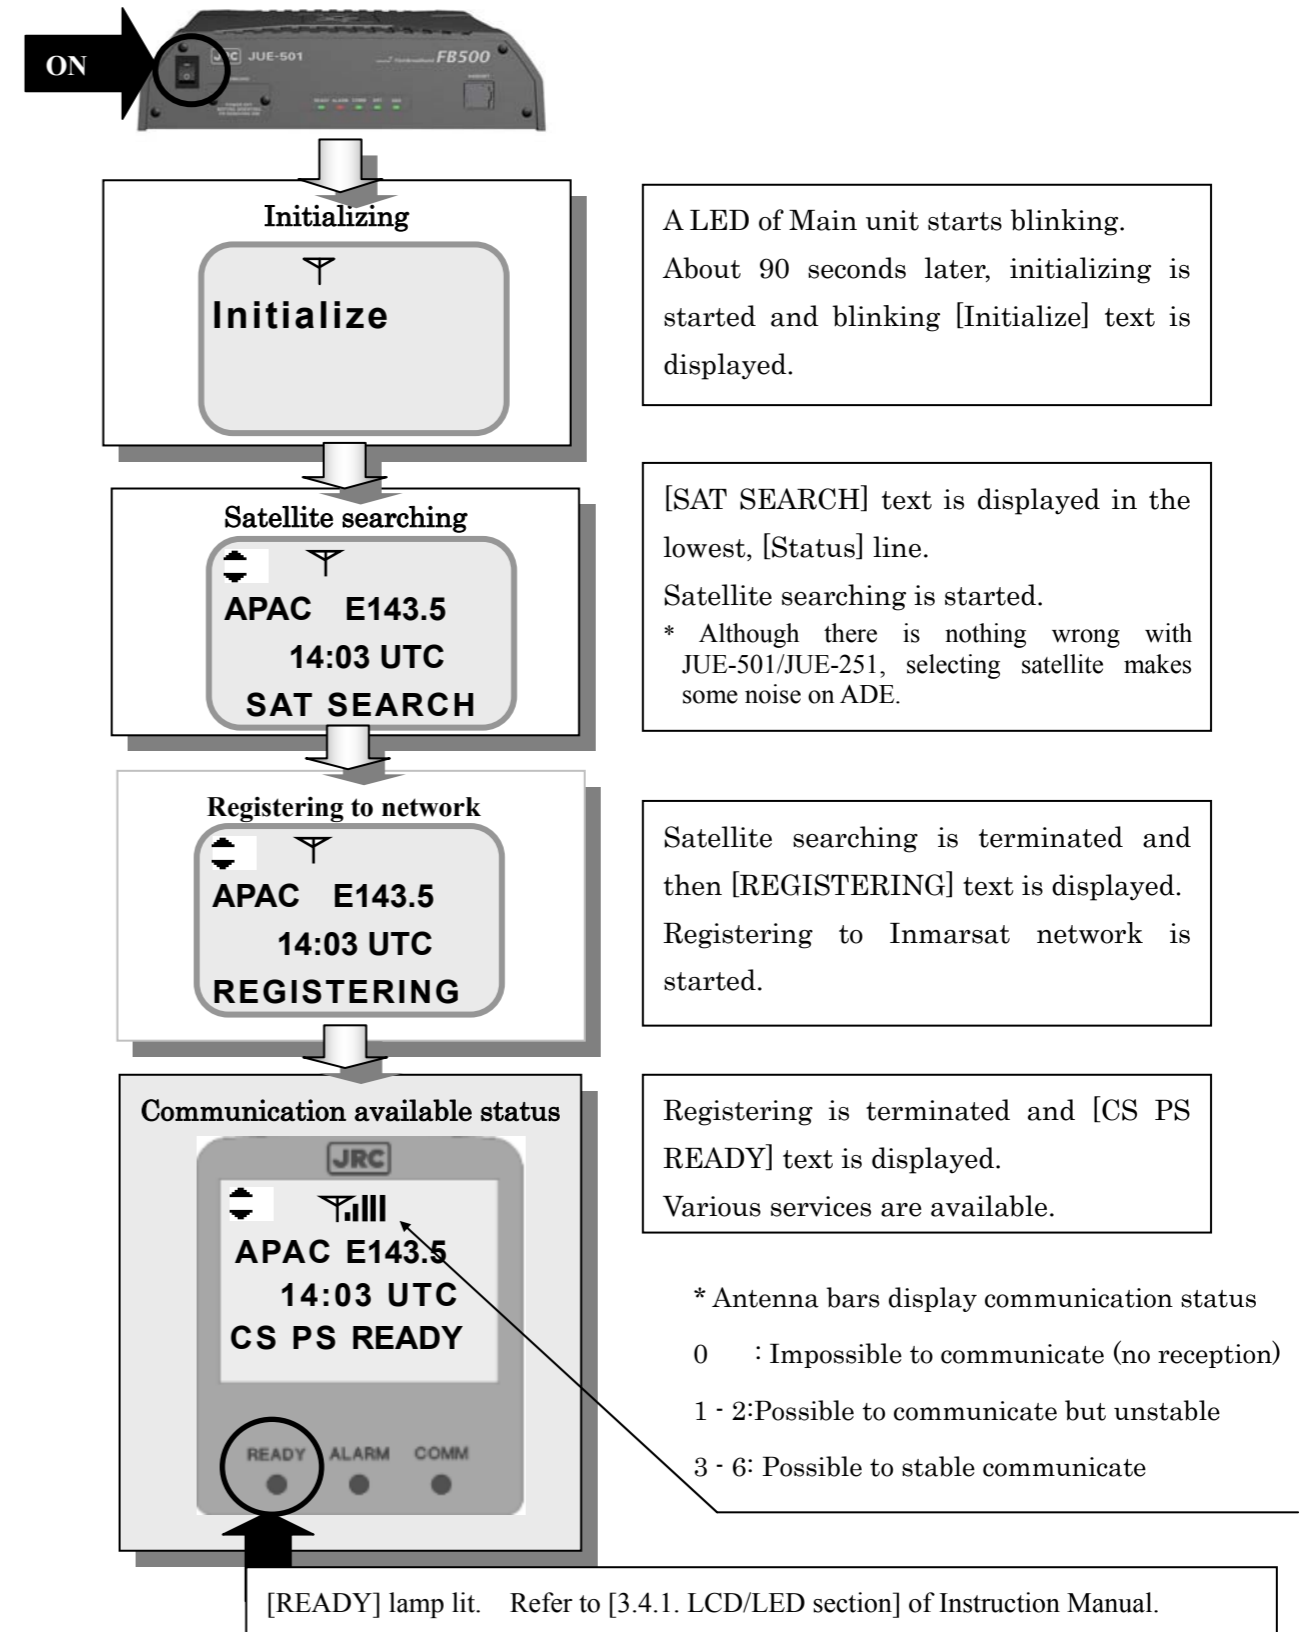

**[When Satellite Search is failed]** Carry out setting again by pressing button.


(See [Satellite selection/setting] (p3) in this Reference Guide.)

**[How to turn OFF the JUE-501/JUE-251]** Press the power switch again.

Screen and all LED lamps are cleared, then operation is terminated.

## 2. Making a call/Answering the phone

### Making a call

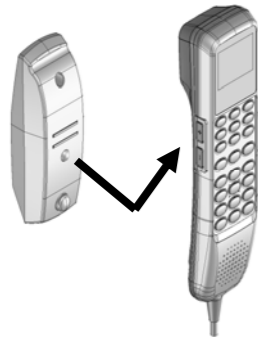

Hook off the Handset from the cradle. Dial tone can be heard.

Press the number and **#** button by alphanumeric button.

**Usual calling : 00 Country code Area code Subscriber's No. #**

Example)

Making a call to 0422-45-9xxx in Japan→0081422459xxx#


Return the Handset to the cradle when calling is terminated.

\*Confirm the reception status by the antenna bar of Handset screen, before making a call.

Execute following countermeasures, in case the JUE-501/JUE-251 cannot receive the satellite signal or received signal strength is too weak to communicate (two or less bars are shown).

- Confirm blocking of the antenna. (Antenna bar on Handset screen is blinking when the antenna is being blocked. For more information refer to Instruction Manual Appendix L)
- Execute satellite selection (See [Satellite selection/setting] (p3) in this Reference Guide )

### Screen transition

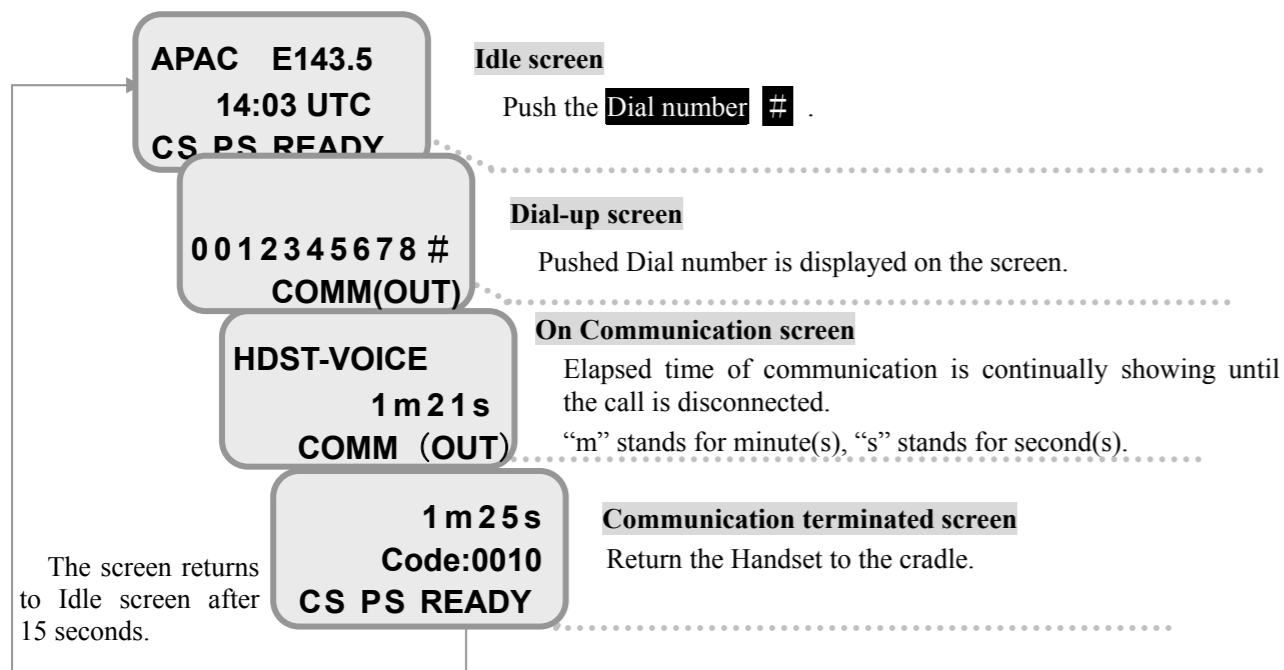

### Answering the phone

Ring tone will sound and the screen changes to [Arrival screen].

Take up the Handset from the cradle, then you can talk with the party. The screen will change to [On communication screen]. After the disconnection, return the Handset to the cradle.

**Ring**  
**00814229xxx**  
**COMM(IN)**

## 3. Satellite selection/setting

Carry out Satellite selection and setting. The current-selected satellite is shown by reversing display of cursor.

Move the cursor by scrolling **▲▼** buttons, then select the new satellite and press **OK** button to fix it.



Press **OK** button.  
Satellite menu screen is displayed.

### Satellite menu screen

**1 Satellite**  
**2 Spot Beam**  
**READY**

### Satellite selection screen

**Auto**  
**AMER W98.0**  
**APAC E143.5**  
**EMAE E25.0**

Screen display moves with **▲▼** buttons, line by line.

The number of the satellites displayed in the Satellite selection screen will change with your ship's position.

Select a new satellite with cursor and press **OK**, then the screen is returned to Satellite menu screen. (STATUS display changes to SAT SEARCH, and changes to READY after new satellite is obtained.)

**1 Satellite**  
**2 Spot Beam**  
**SAT SEARCH**

\* Although there is nothing wrong with JUE-501/JUE-251, selecting satellite makes some noise on ADE.

SEARCH NG is displayed in the lowest line, when satellite acquisition is failed for some reason.

Carry out Satellite selection again.

**APAC E143.5**  
**14:03 UTC**  
**SEARCH NG**